

1. Measure and mark the fixing height of the Track

The screw holes on the SKX brackets are door + 86 mm.
(For SK brackets, the installation height is a door + 88 mm).
This leaves a 9 mm gap between the floor and the door. NB! If the floor is uneven, measure the height at the highest point of the floor.


After marking one point, draw a horizontal line on the wall using the spirit level along the entire track. This is how you mark the horizontal locations of the screws for each bracket.

With the mounting bracket bolt you can adjust the height of the door by approximately ± 2 mm after installation.



2. Slide the Wall brackets to the track

Slide the bracket lightly from the center so that it slides straight and effortlessly along the groove. Do not use force to prevent the bracket from "clipping".

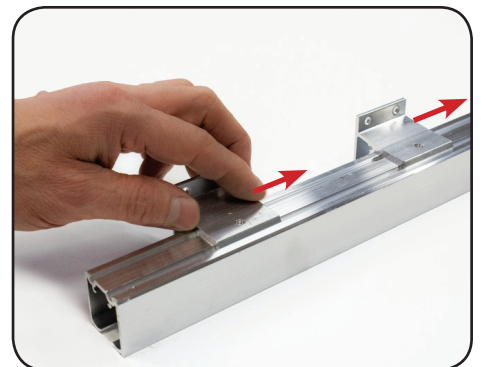


3. Mount the Brackets and the Track to the wall and finally tighten the clamping screws on the Brackets

If you are working alone, first tighten the center bracket to the wall with one screw so you can easily support the track when mounting the other brackets.




4. Slide the parts in to the track. When inserting from the left end, parts come in the following order:


1. Stop KP-75 ("rubber part" behind)
2. Stop MP-75 ("spearhead" above)
3. Hanger MP-75 ("spearhead" behind)
4. Stop KP-75 ("rubber part" above)

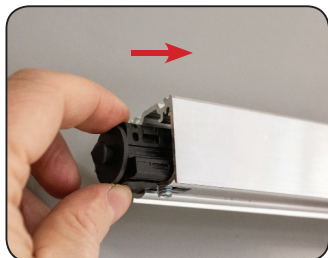


1

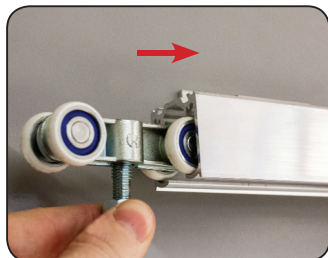

2

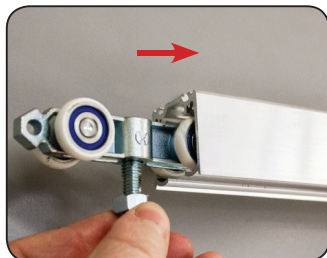

3


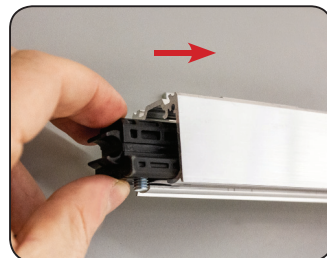


4

NB! If you have other accessories such as Soft close, see their installation instructions at www.helaform.com


5. Attach the Plates to the door

Attach the plates to the door $\frac{1}{5}$ of the door's width from the edge so that the slots of the bolts face the wall.

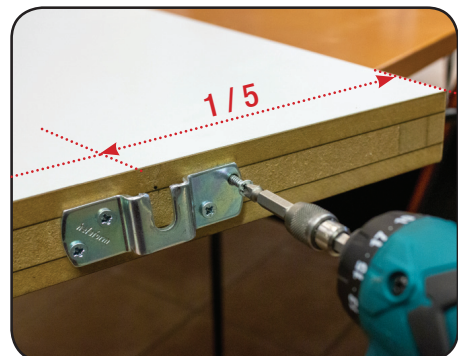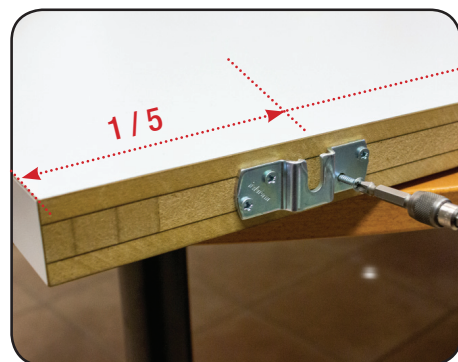

6. Lift the door to its place

Adjust the height and position of the door by turning the hanger bolts. Tighten the nuts on to the plates.

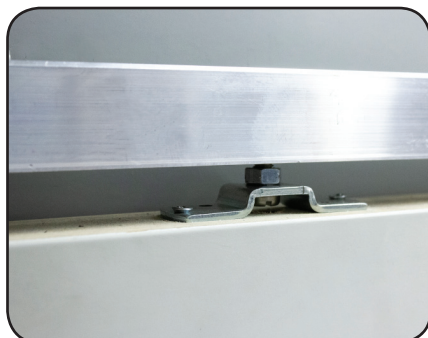

7. Install the Bottom guide


Position and mark the place of the bottom guide so that it is completely hidden when the door is at the “open” end.
Slide the door out of the way and screw the bottom guide to the floor. The bottom guide should remain in the guiding groove throughout the entire movement of the door.



8. Move the Stop to the correct position

Move the stop to where you want the door to stop at the “open” and “closed” ends and tighten.


The best way to tighten with one hand is to push the stopper to the ceiling of the track while tightening it. Use a good tool to get a firm grip.

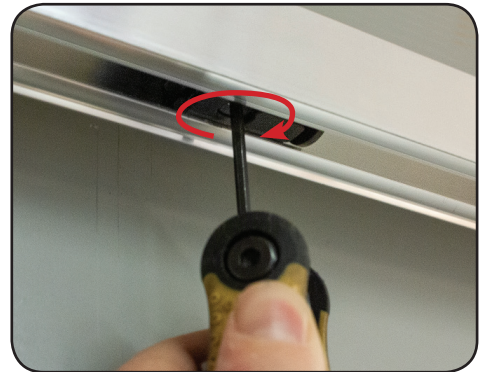

9. Install the Cover plate

Before installing the cover plate, make sure that the door and all parts are in the correct position, function and height.

1. Insert the **upper clamp** of the Cover plate into the groove on the track and slide the Cover plate in the middle of the track.

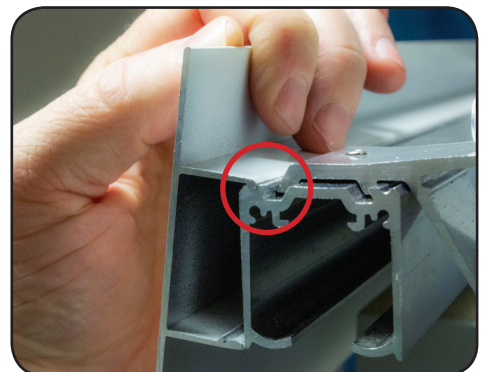

2. Use one hand to hold the mounting claw on the track by squeezing the Track and Cover plate together (thumb in front of cover plate, other fingers between track and wall)




3. With one hand grasp to the top of the Cover plate at the end of the track, pull down and press the **lower clamp** to its place. Proceed this way along the entire track, moving only one hand at a time.



At each point, make sure that the upper clamp is in place before attempting to press the lower clamp. If the Track is not straight, you will need to use more force to hold the upper clamp in the track.


Check that the Cover plate is fully seated by tapping it with the palm of your hand at a few points on the track.

4. Finish with End caps.

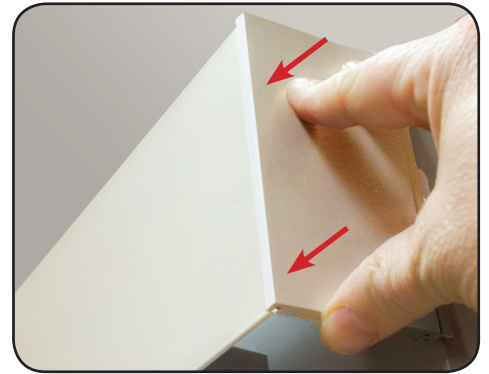


10. Detaching the Cover plate

1. Remove the End caps.

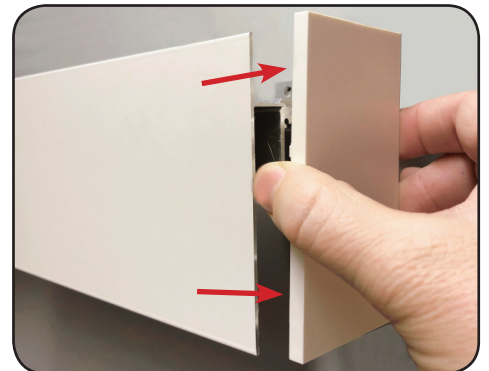


2. Twist the Cover plate slightly from the end at the bottom from the track.

Hold the Cover plate with one hand at all times to prevent it from falling off when removed.

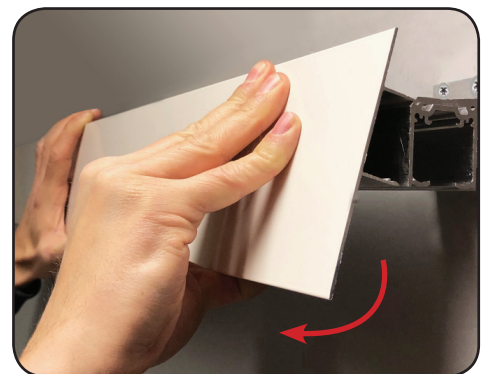


Scale images

SKX-brackets

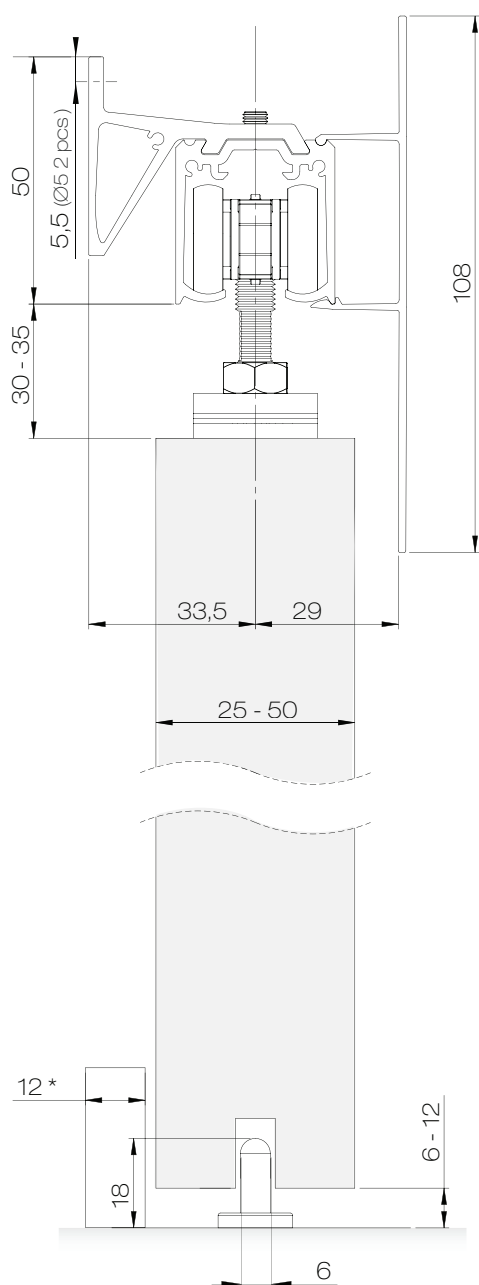

SK-brackets

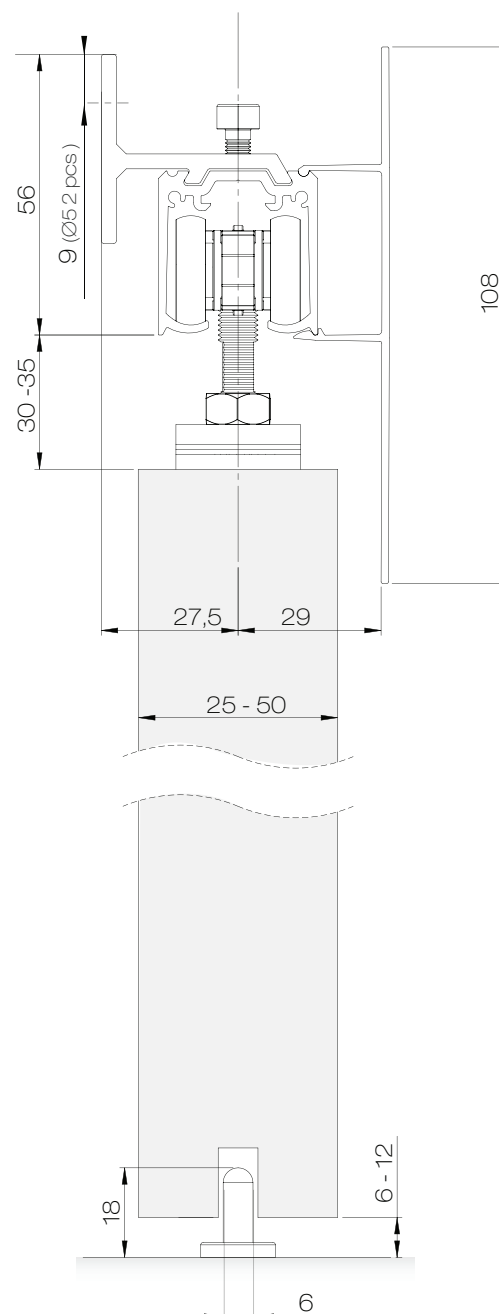

* With 12 mm baseboard the door thickness can be max. 40 mm (by using SKX-brackets)