

IMPORTANT TIPS FOR THE INSTALLATION OF A RETRÖ FITTINGS SET

1. BE SURE TO CHECK THE WEIGHT CAPACITY OF THE WALL

- Be sure to check the weight capacity of the wall prior to the installation. A “standard” door weight is between 20-50 kg depending on the door size, but this of course depends on what kind of door you use. The wall structure and the fixings must carry the weight of the door and the track mechanism.
- When fixing to stone walls, use the appropriate wall plugs. When fixing to drywall at least some of the screws must be fixed to the frame post.
- To make sure that the drywall’s capacity is enough, you can install “a support strip” underneath the brackets, which can be installed to the wall with panel anchors.

2. BE EXACT WITH YOUR MEASUREMENTS

- First you must carefully measure the tracks place on the wall according to the installation instructions included in the Retrö fittings set. To ensure that the track is straight use a leveller.
- Make sure that the holes for the hanger screws are drilled in the right places according to the instructions.
- Make sure that the door slides smoothly the entire track length.
- If there are flooring lists or door frames in your doorway, consider any need to install a "baseboard" under the wall brackets to prevent the door from hitting the frames.

3. AND ALWAYS REMEMBER SAFETY FIRST

- The installation of the track mechanism is safe, if you follow the installation instructions. Use the anti-jump blockers to make sure that the door stays on the track. Remember to tighten the screws and nuts occasionally, as the doors movement causes them to loosen a little over time. Please note that the customer is responsible for any product damages caused during the installation.




Have a great installation!

helaform®

Retrö 2 m


-asennusohjeet / -montering / -installation manual

helaform®

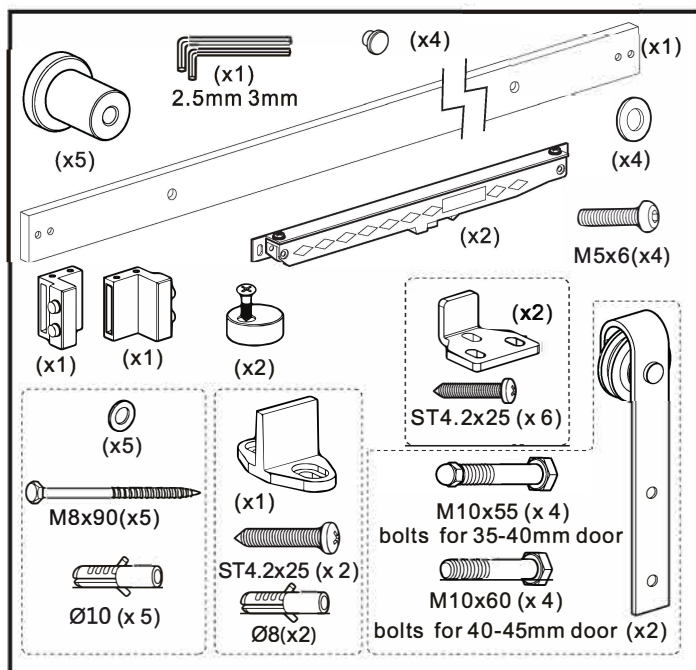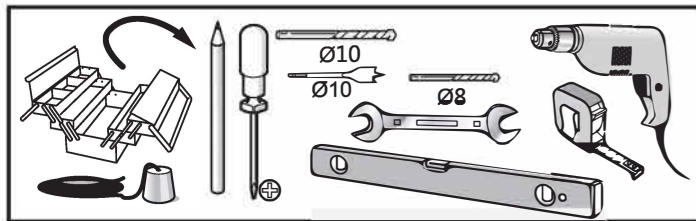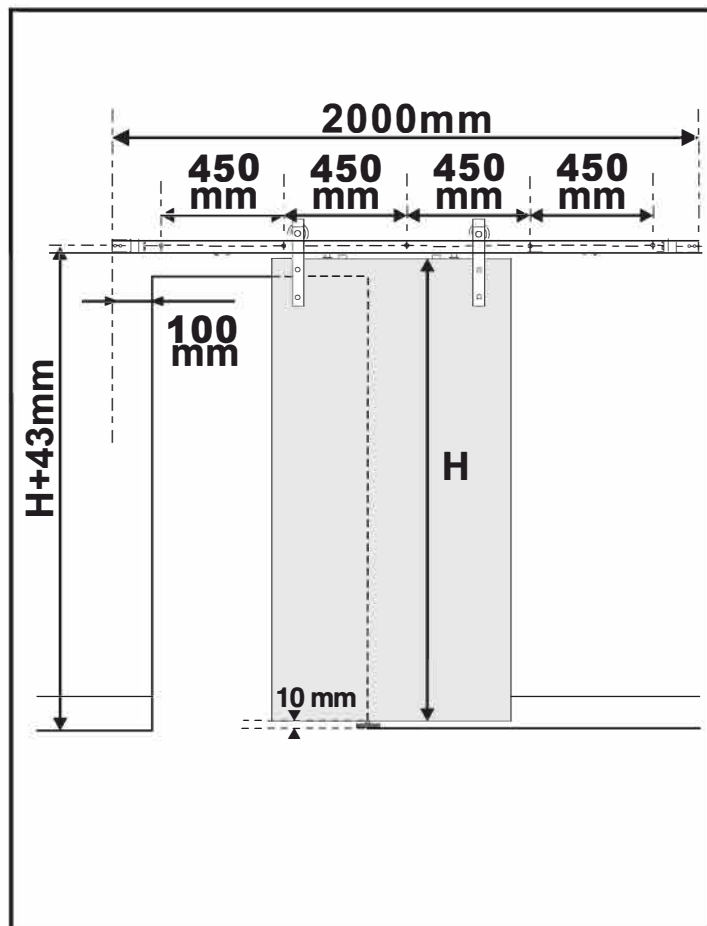








1





Left


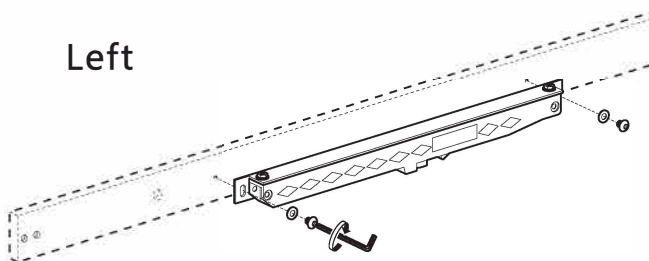


Right

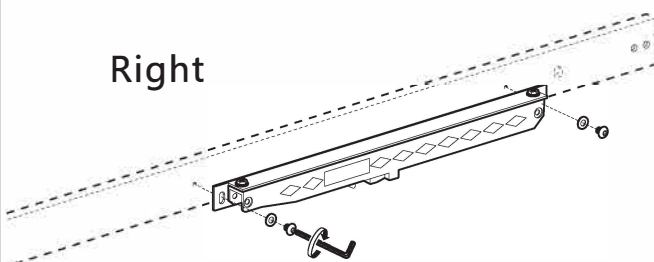

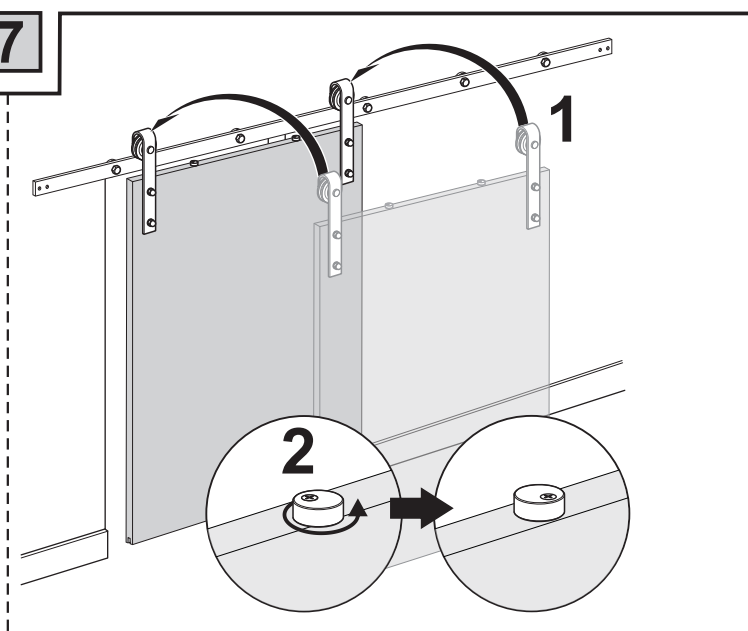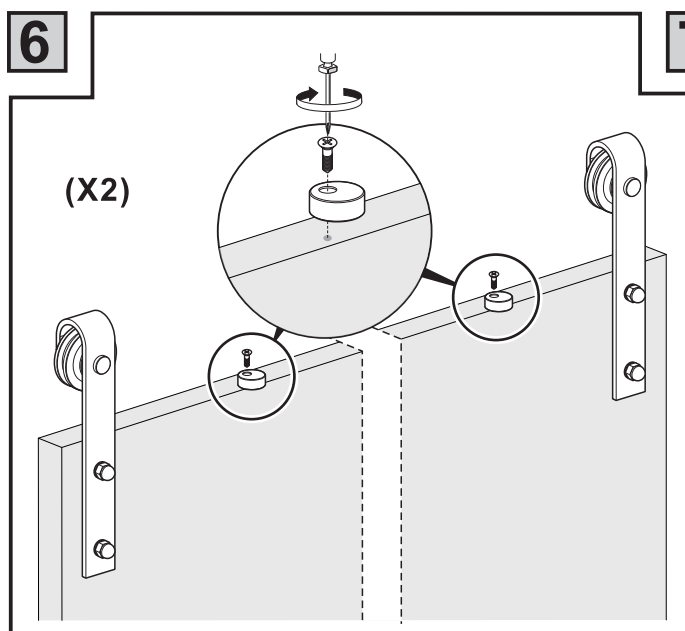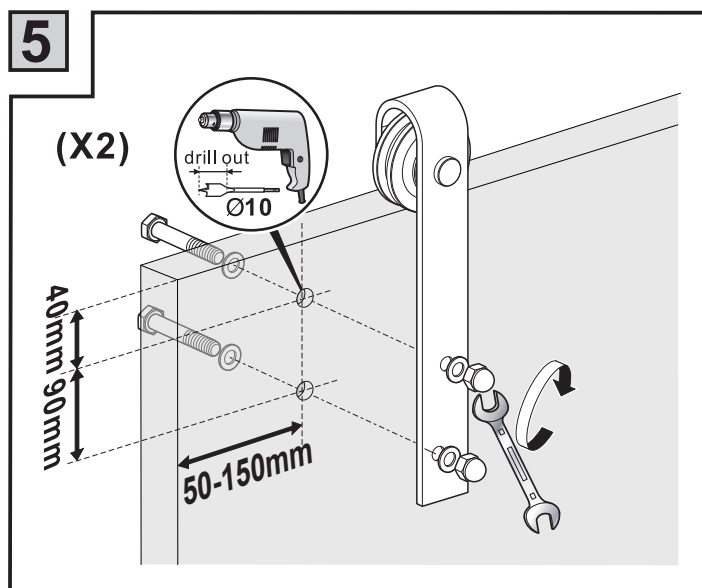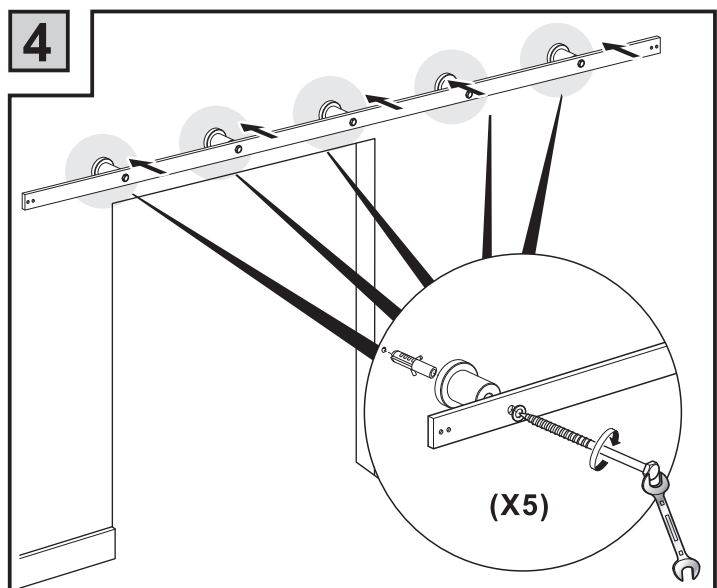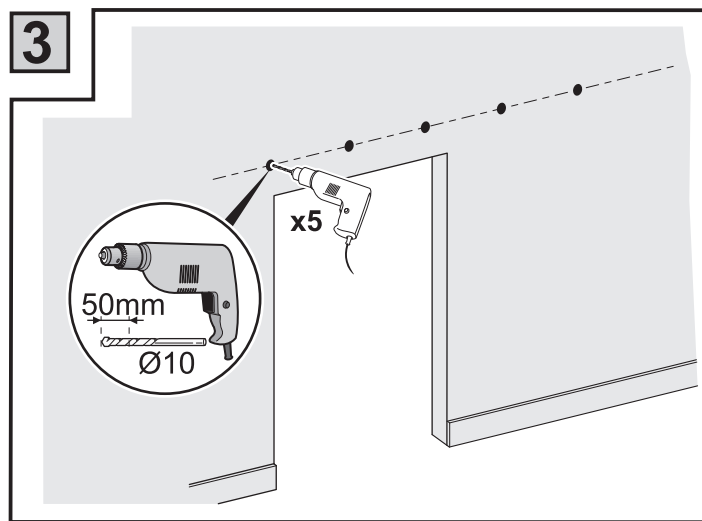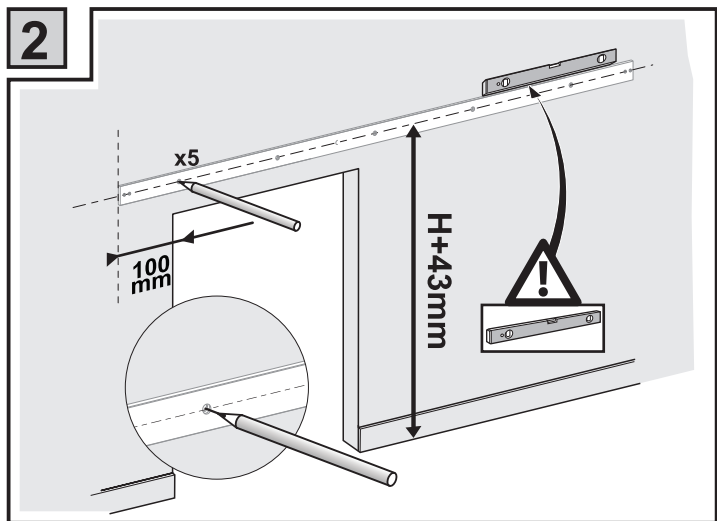

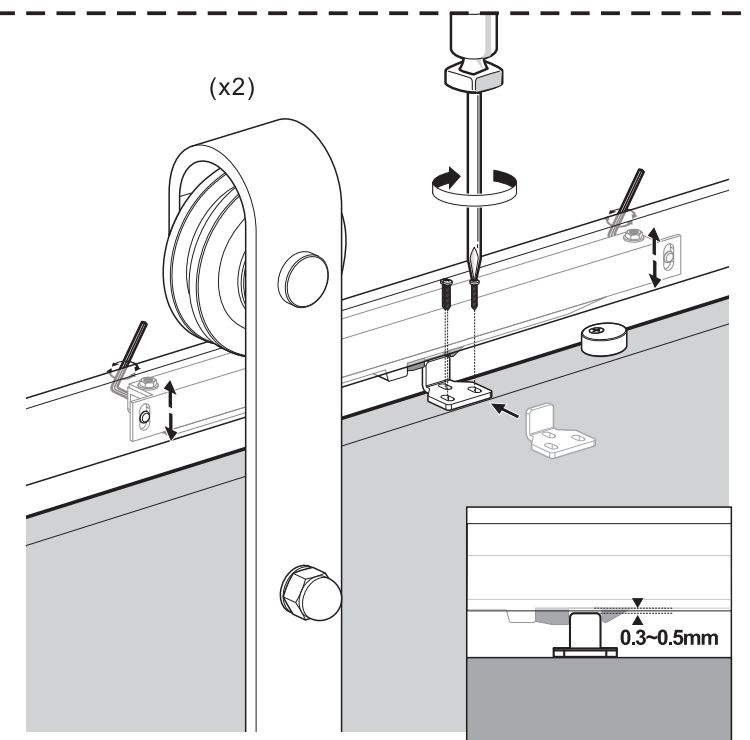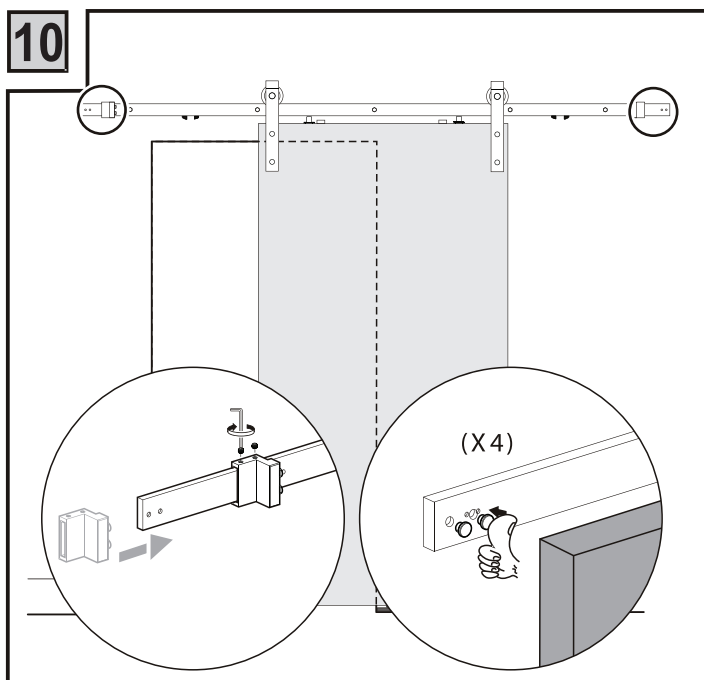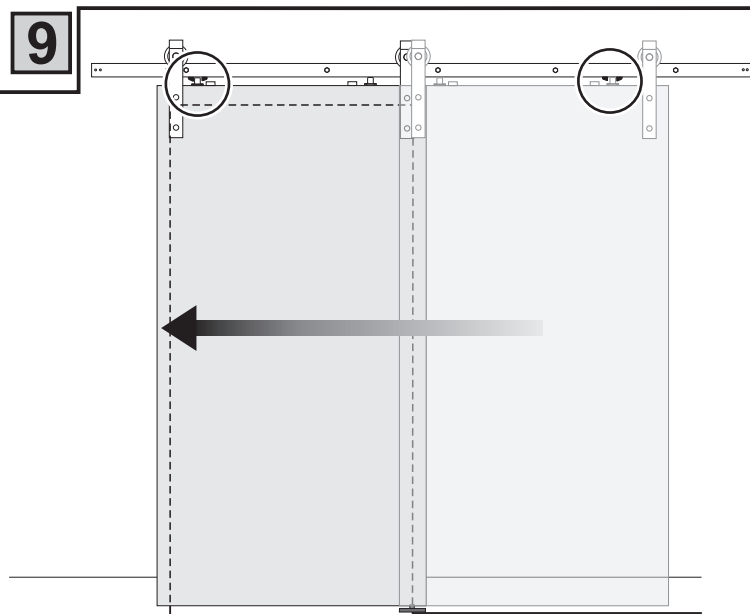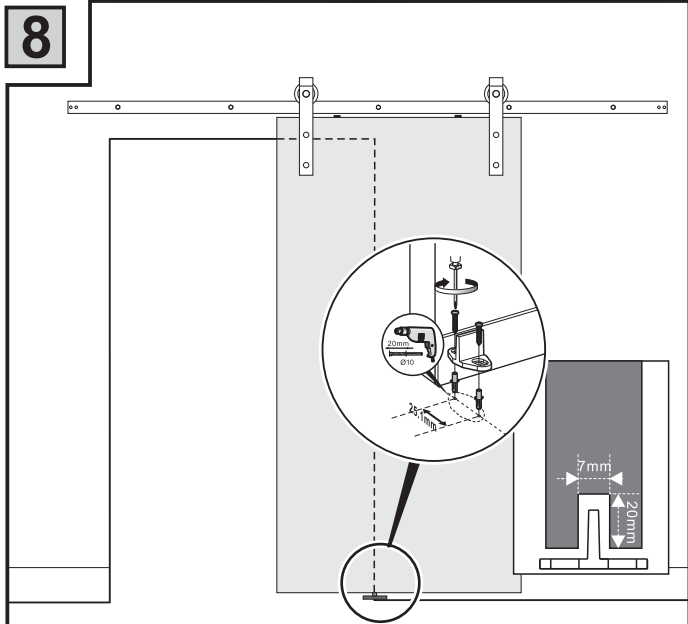

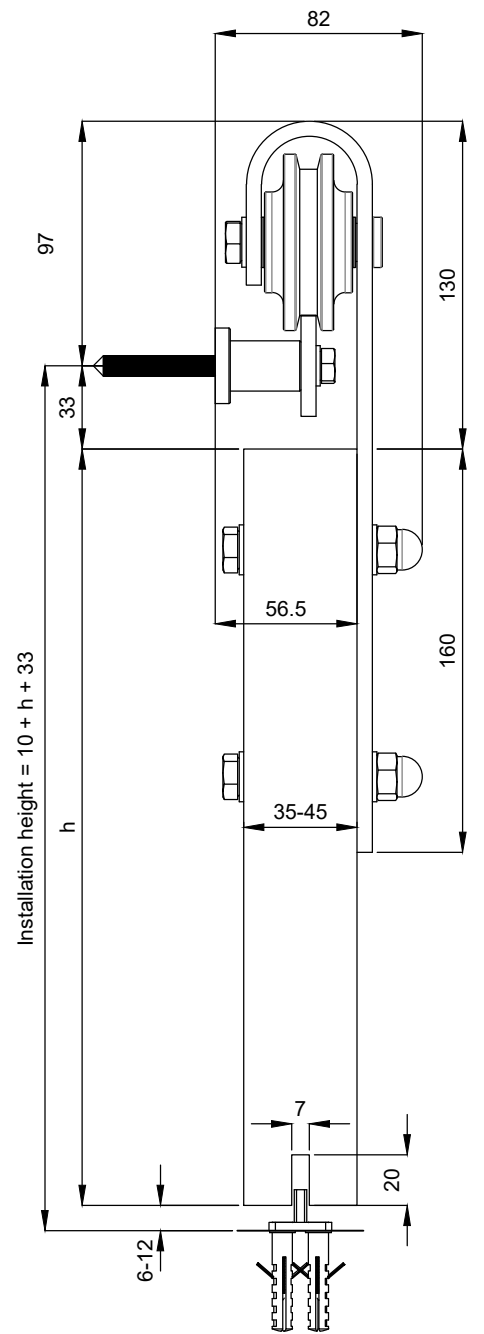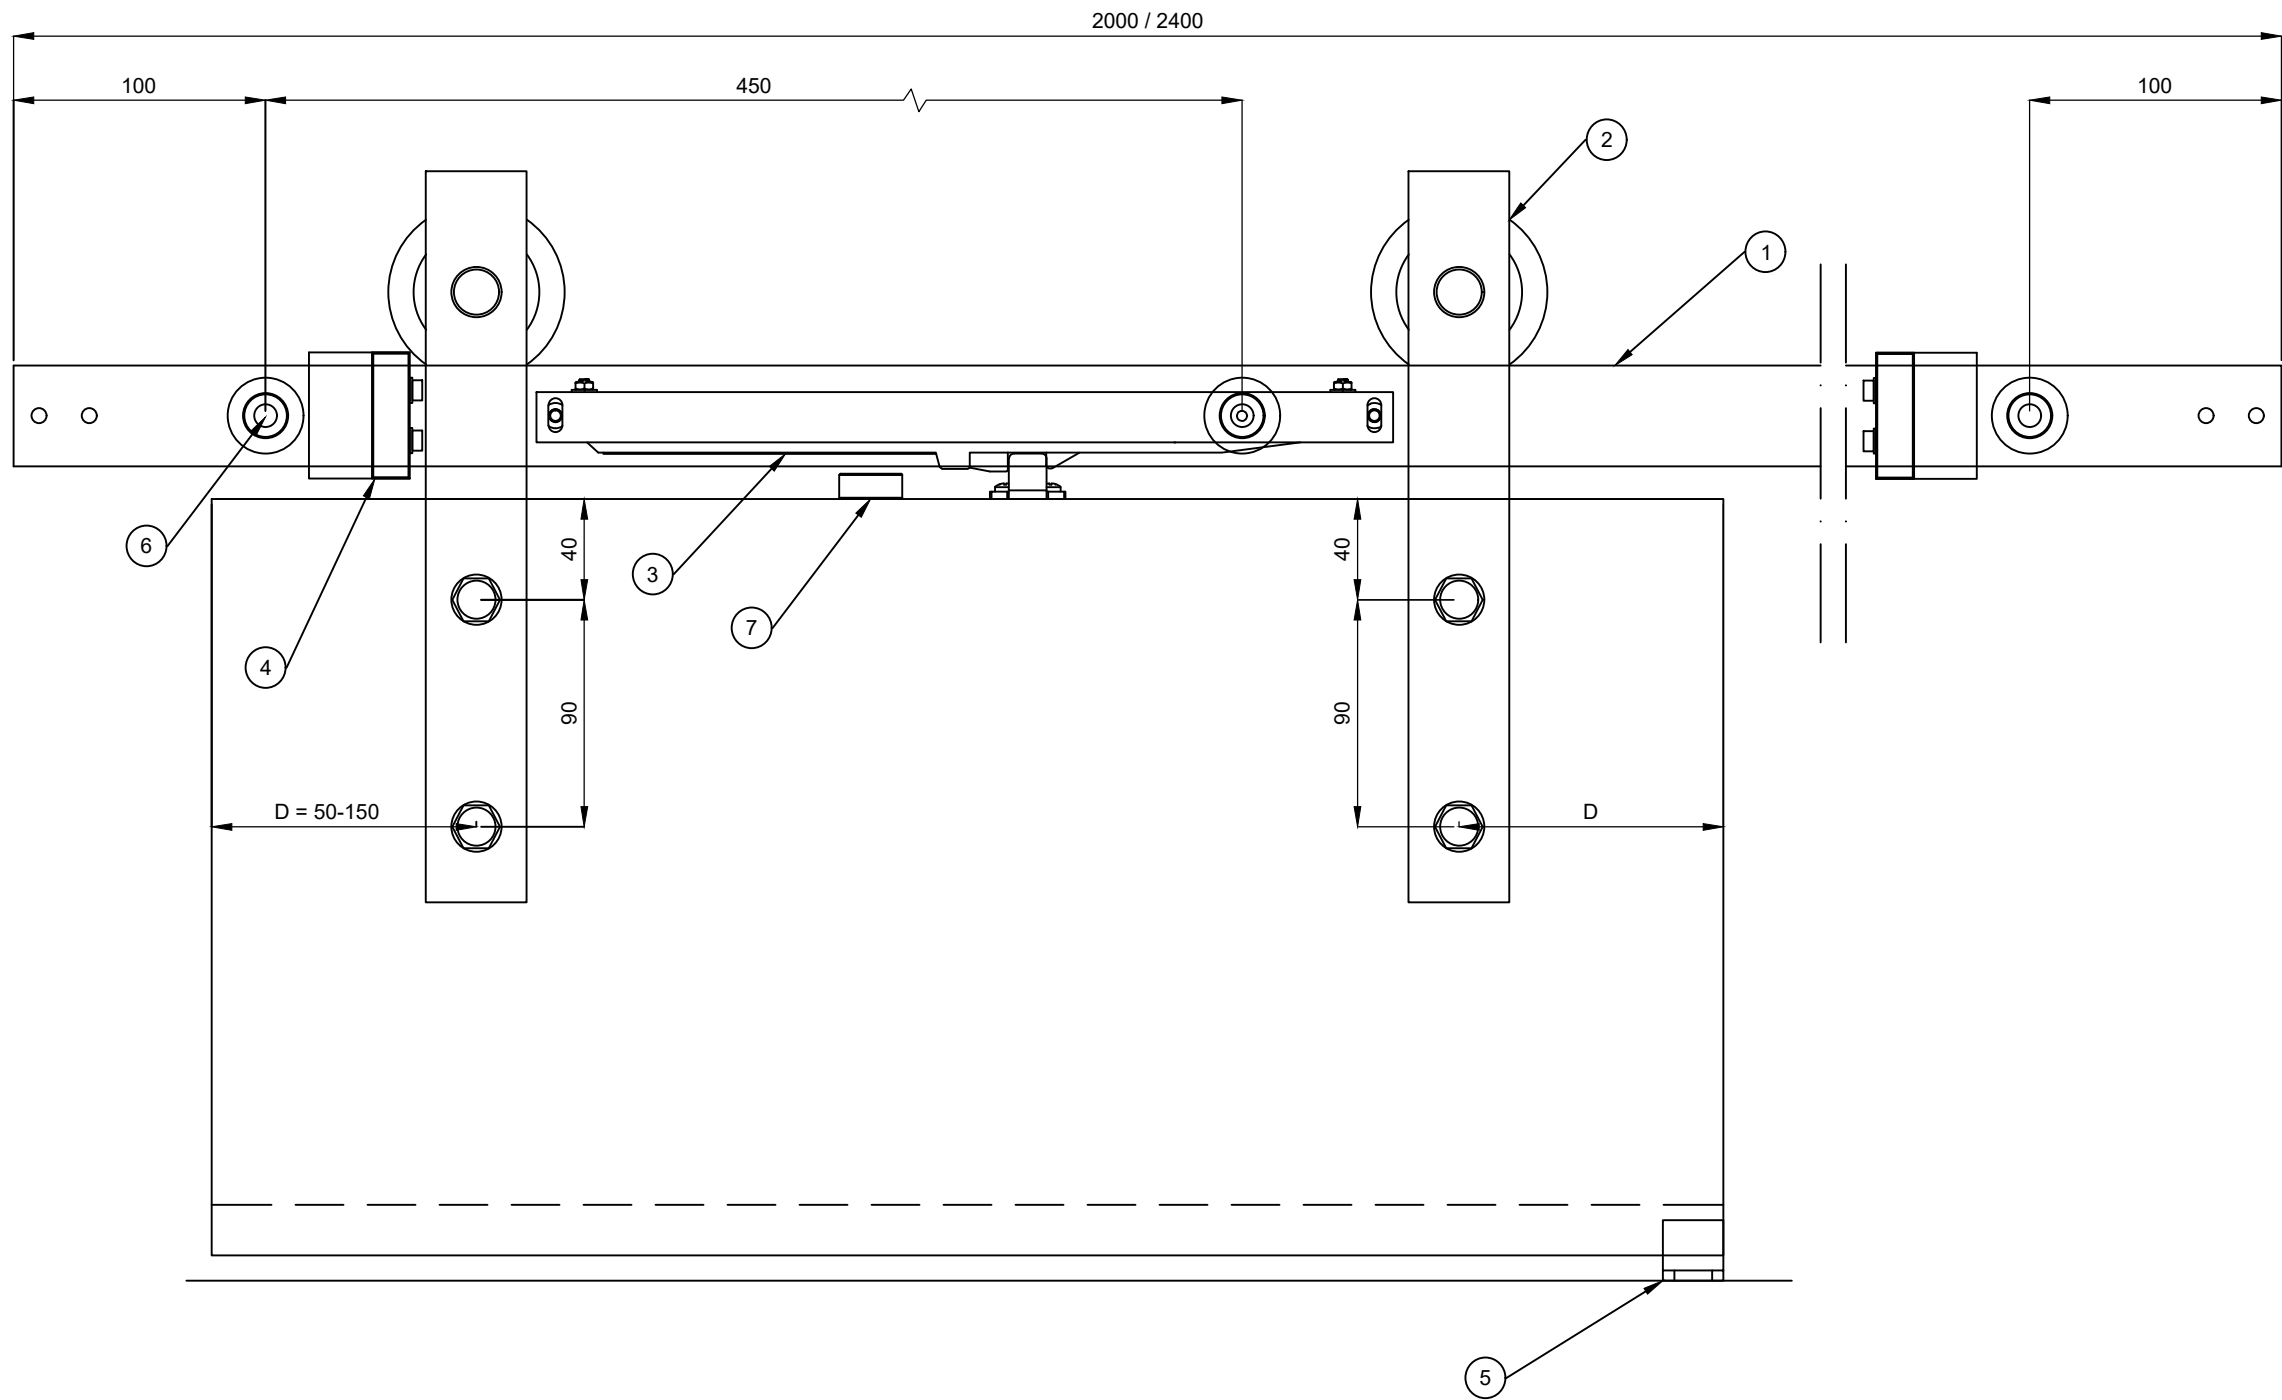

Nimike / Description Helasarja kiskolla RETRÖ / Fittings set with track RETRÖ				Tuotenumero / Product Nr. 11700 / 11701		Tuotesarja / Product Series RETRÖ		Piirtäjä / By AM	Mittakaava / Scale 1:3 A3	Rev 01
1. Track K-RETRÖ	5. Bottom guide AO-RETRÖ	9.		13.		Huomiot / Notes 1. Drawing is for reference only and subject to change without notice. 2. All product dimensions are in millimeter. 3. Door panels (/movable objects) are not in scale.				
2. Hanger PP-RETRÖ	6. Wall bracket SK-RETRÖ	10.		14.						
3. Soft close OHR-RETRÖ	7. Jump block HE-RETRÖ	11.		15.						
4. Track stop KP-RETRÖ	8.	12.		16.						